


# Anleitung/Manual

## Lazy Camping – Lazy Tent



 Please read first

Thank you for choosing a Lazy Tent from Lazy Camping.  
Before you begin, take a moment to familiarize yourself with these instructions and the parts included.  
On page 2 you will find a list of all parts, quantities and tools needed.

 Important notes

It is essential that all Lazy Camping products are properly and securely mounted and attached to your vehicle. Improper attachment can result in an accident and cause serious bodily injury or death. You are responsible for mounting and securing all Lazy Camping products to your vehicle. Attachments must be inspected before use and products must be checked regularly for adjustment, wear and damage. Therefore, you must read and understand all instructions and cautions before mounting or using Lazy Camping products. If you do not understand all the instructions and cautions, or if you have no manual experience and you are not thoroughly familiar with the assembly procedures, you should have the product installed by a professional assembler or other qualified persons.

Ausführliches YouTube Video  
zum  
Lazy Tent – Aufbau



# Materialliste



## Bag 1

- 4x end caps for mounting rail (+2x spare)
- 18x M8 screws for mounting rail
- 18x washer M8
- 18x spring washer M8 for mounting rail
- 18x slot nuts M8 for mounting rail (already in the rail)



## Bag 2

- 16x sleeve screw M4 (+2 spare)
- 16x sleeve nut M4 (+2 spare)
- 16x spring washer M4 (+2 spare)
- 16x washer M4 (+2 spare)



## Bag 3

- 18x screws 30 mm M5 (+2)
- 20x washers M5 (is not needed)\*
- 18x spring washers M5 (+2 spare)
- 18x lifting nuts M5 (+2 spare)



Tips from the pro: Well sorted is half assembled!



## Bag 4

- 6x fully threaded screws 35 mm M5 (+2 spare)
- 6x lifting nuts M5 (+2 spare)
- 6x washer M5 (+2 spare)
- 6x spring washer M5 (+2 spare)
- 4x fabric straps (spare)



## Bag 5

- 2x fully threaded screws 50 mm M8
- 4x half threaded screws 45 mm M8
- 6x lock nut M8
- 2x connecting bracket for canopy bar



## Bag 6

- 2x half threaded screws M8 60 mm (+2 spare)
- 2x lock nut M8 (+2 spare)
- 2x spacers (+1 spare)
- 4x spacers (+2 spare)



## Bag 7

- 13 mm combination wrench
- 8 mm combination wrench
- 1x M8 Allen
- 1x M5 Allen
- 2x M4 Allen



## Bag 8

Mounting set consisting of:

- 4x mounting bracket
- 8x screws M8 45 mm
- 8x spring washer M8
- 8x washer M8
- 8x star grip screw



## Material

- 4x frame connector caps



- 2x Gas springs



- 2x Mounting bracket



- 2x outer frame short
- 2x outer frame long



- 7x inner laths
- 2x outer laths



- 2x long brackets
- 1x canopy bracket
- 4x short bars
- 2x short bars with hole



- 1x telescopic ladder
- 1x ladder bag



Detailed YouTube video

Lazy Tent - Assembly



## Material

- 2x Mounting rail



- 1x Inner tent



- 1x Outer tent



- 1x PVC cover
- 2x PVC cover belt



- 2x Shoe bags



- 4x Hard foam panel



- 1x Opening rope



Detailed YouTube video

Lazy Tent - Assembly



# CONSTRUCTION

## Step 1

### Screw the outer frame together

#### You need:

- 2x Outer frame
- 2x Inner frame
- 4x frame connection caps
- 16x sleeve screw M4
- 16x washer M4
- 16x spring washer M4
- 16x sleeve nut M4

#### Tools

- 2x Allen key small M4



Place the two long outer frames opposite each other so that you can connect them to the short frames. The outer frame with the silver retaining screw is the rear frame..

The connecting caps are inserted into the respective frames to connect all four parts.

Each side is secured with 2 screws each (16 pieces in total)



Insert the sleeve bolt including washer and spring washer\* from the inside through the frame and connect it from the outside with the sleeve nut and tighten it only by hand for the time being.

Repeat the step until you have inserted all screws. Then take the two M4 Allen keys and tighten the screws. (One Allen key locks from the inside and the other one tightens).

Tips from a pro:

\*Sequence = sleeve screw - washer - spring lockwasher



## Step 2

### Install the slatted frame

#### You need:

- 2x outer laths, each with 2 additional holes in the front area
- 7x inner slats

#### Tools

- 8 mm open-end wrench
- 5s Allen wrench

#### For the connection outer slats:

- 2x outer laths
- 4x screw 35 mm M4
- 4x washer M4
- 4x spring washer M4
- 4x lifting nut M4
- 4x connecting lug




#### For the connection inner slats:

- 7x inner laths
- 14x screw 30 mm M4
- 14x spring washer M4
- 14x nut M4
- 8 mm wrench M4



Slide the two outer laths with the pre-punched holes into the outer frame. Make sure that the two holes point to the front.

Now slide the remaining laths into the frames, always leaving three holes free.

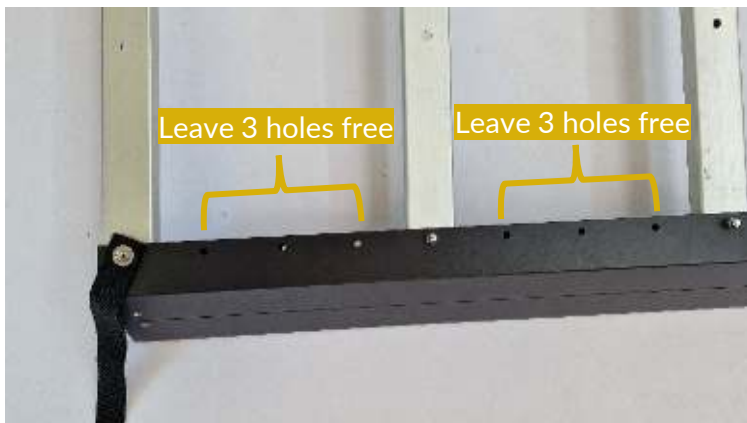


Tips from the pros:  
Don't give up!




Connect the outer frames to the outer laths in the very first hole. Before inserting the lifting nut and spring washer at the bottom, place a connecting tab between each.

1. Insert fully threaded screw 35 mm from the inside to the outside.
2. Place connecting tab over it
3. Washer
4. Spring washer
5. Lift nut

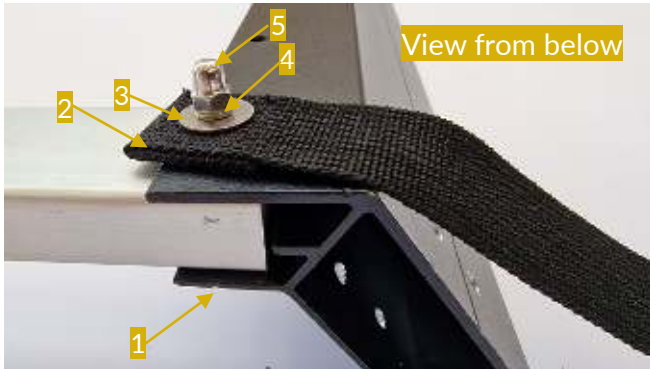

Connect the inner laths to the outer frames and tighten the lifting nuts

1. Pass through fully threaded screw 30 mm from the inside to the outside
2. Spring washer
3. Lift nut.

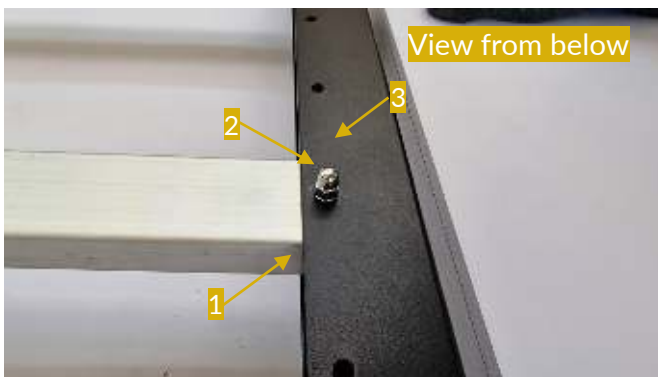

Assembled slatted frame



Tips from a professional:  
Spring washer = snap ring





## Step 3

### Attach the mounting rails

#### You need:

- 2x mounting rail
- 18x M8 screws for mounting rail
- 18x washer M8
- 18x spring washer M8 for mounting rail
- 18x slot nuts M8 for mounting rail (already in the rail)

#### Tools

- 1x Allen key M8



Place the mounting rails under the tent so that the outer sides are flush with the frame. Slide the sliding blocks into the correct position so that they are under the holes.

Now connect the mounting rails to the battens. Make sure that you have an equal overhang on both sides. Choose the inner hole of the laths to get 80cm width.



Slide the sliding block to the correct position.

Then insert the screw from above into the hole of the inner lath.

1. Washer M8
2. Spring washer M8
3. Screw M8

Repeat this step 18 times and tighten the screw with the 8 mm Allen key.

Tips from the pro: flush - make sure the rails don't peek over the frame on the left or right side.



## Step 4

### Die Befestigungswinkel anbringen

#### You need:

- 2x mounting bracket
- 4x fully threaded screw 30 mm
- 2x fully threaded screw 35 mm
- 6x spring washer
- 2x washer
- 6x lifting nuts

Mount the connecting brackets to the outer frame with the 35mm screw. You will find 2 punched holes in each of the two outer laths and a pre-punched hole on the frame.

Position the angles so that they point outward and the tip points forward. Then first fasten the 35 mm screw in the right and left **outer frame**.


1. Pass screw 35mm from the inside to the outside
2. Washer
3. Spring washer
4. Lift nut

Repeat the step without washer with the 2 screws 30 mm each to connect the outer laths to the angle.

1. Pass screw 30mm from the inside to the outside
2. Spring washer
3. Lift nut

#### Tools

- 8 mm open-end wrench
- 4 mm Allen

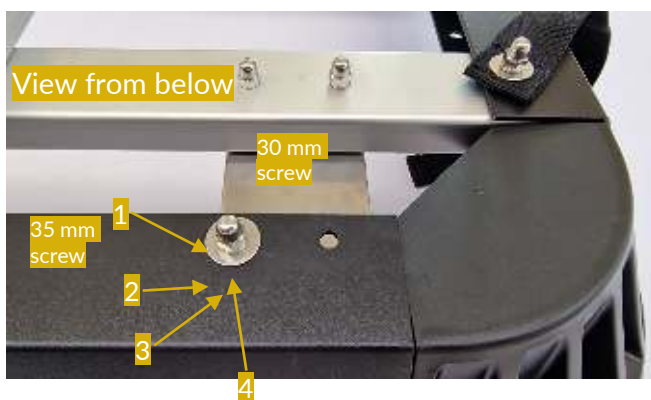

Tips from a pro: The connecting brackets are then used for the tent poles!





## Step 5

### Connect the bracket and canopy rods


#### You need:

- 2x Long stirrup bars without bend
- 4x short bars without hole
- 1x long canopy poles with bend
- 2x short poles with hole
- 1x opening rope

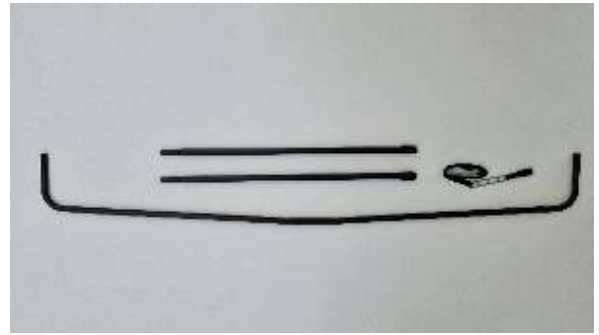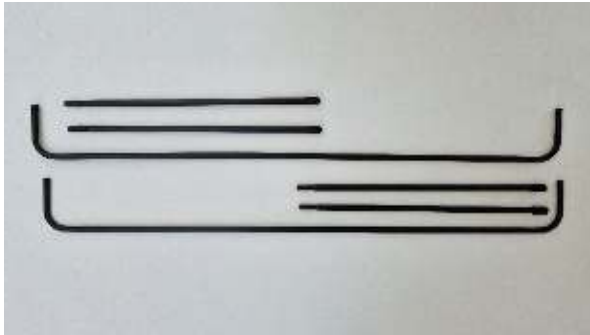

Now connect the 4 small rods (without hole) with the 2 straight bracket rods.

Then connect the 2 small rods (with pre-punched hole) to the canopy rod (with bend). Before doing so, insert the lashing strap into the canopy pole.

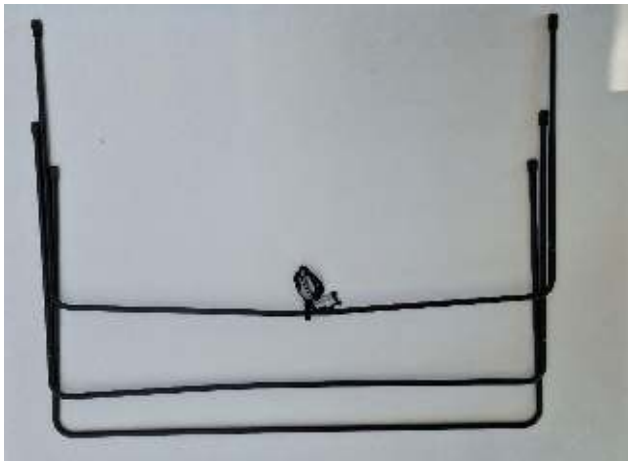

#### Notice

\*If the bars are difficult or impossible to insert into each other due to the powder coating, please sand them with sandpaper from the inside.



## Step 6

### Connect the bracket and canopy rods to the frames

#### You need:

- 2x clamping bracket
- 2x fully threaded screw
- 4x half thread screw
- 6x hanger nut

#### Tools

- 8 mm Allen key
- 13 mm open end wrench

Connect the straight stirrup bars to the mounting bracket one after the other. Start with the lower hole.

1. Insert the semi-threaded screw from the inside through the stirrup bar and the connector.
2. Stick nut



Then tighten well. The Allen key locks and the open-end wrench tightens.

Repeat this step with the second straight stirrup bar at the middle hole

The canopy bar is connected to the highest hole, the clamping bracket and the fully threaded screws.

1. Place the clamping bracket between the canopy bar and the connector.
2. Pass the fully threaded screw through the tensioning bracket-canopy bar-tensioning bracket.
3. Stick nut



Then tighten well. The Allen key locks and the open-end wrench tightens.

Detailed YouTube video

Lazy Tent - Assembly



## Attach the gas struts to the frame

### You need:

- 2x gas springs
- 2x half thread screws
- 4x spacers
- 2x spacers

### Tools

- 8 mm Allen key
- 13 mm open end wrench




Turn the two gas struts into the threaded screw already attached to the outer frame.



Now connect the other end of the gas spring with the canopy rod. To do this, it is best to fold the canopy rod forward and then pull it up into the correct position to perform the half-thread screw from the outside:

1. Semi-threaded screw
2. Eyelet gas spring
3. Spacer
4. Spacer
5. Canopy rod
6. Spacer
7. Stick nut

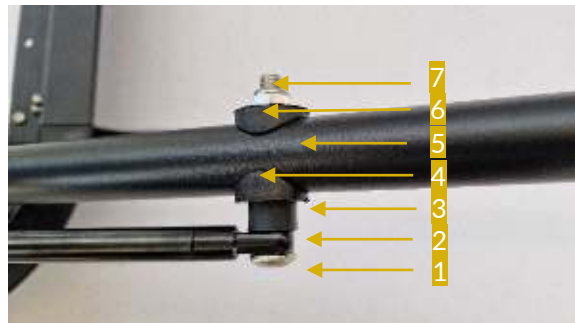

Then tighten well. The Allen key locks and the open-end wrench tightens.



## Step 8

### Connect the inner fabric with the straight stirrup bars

#### *You need:*

- Inner fabric


Unfold the inner fabric and place it inside the frame. The Lazy Tent logo must be on the front left.



Then connect the tabs that we attached to the outer battens in step 2 to the inner tent at all 4 corners. Do not pull too tight!



After you have connected all 4 flaps to the inner tent, you can clip the inner tent to the two straight poles (not to the front pole). Start with the middle pole, and then clip the tent to the rear pole.

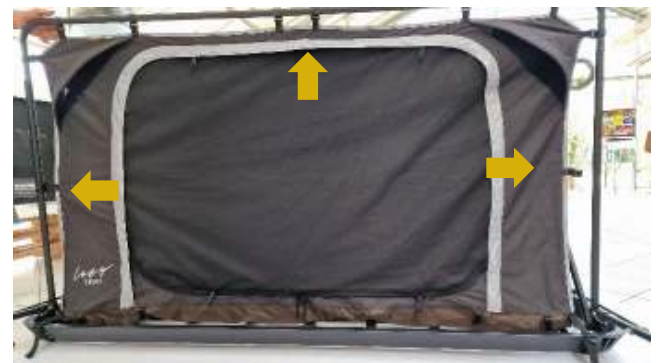

Tipps vom Profi:  
Es gibt mehr als drei Klipps.



## Step 9

### Connect the outer tent

#### *You need:*

- Outer tent

First unfold the outer tent - the side with the longer piece is the front side.

Connect the outer tent to the rear connecting flaps of the platform. To do this, pass the outer tent flap through the plastic opening of the already connected inner tent and outer frame flap.



Now attach the outer tent from back to front to the rear and middle hoops.



Before you connect the last pole (canopy pole) you can lift the canopy pole a little and pull the outer tent over the canopy pole. So that the outer tent is already stretched by itself.



Velcro the outer tent to the canopy pole.

Then connect the outer tent to the connection brackets (right & left). Make sure to pull the strap from top to bottom through the connection bracket and connect it to the outer tent.



Tips from the pros: If the strap seems too short, pull the canopy pole a little towards the tent.



## Step 10

### Positioning the opening rope

Pass the opening rope between the clips and over all the hoop poles so that the opening rope comes out at the back of the tent.

(Simply pull the strap and hook it with the front tab).



## Step 11

### Put in hard foam panels

Place the four hard shell panels in the tent.

## Step 12

### Fasten the Velcro

Close the tent and turn it over once. Now attach the inner tent to the platform from below.



Detailed YouTube video

Lazy Tent - Assembly





## Step 13

### Connect the roof tent with the roof racks

#### You need:

- 4x mounting bracket
- 8x screws M8 45 mm
- 8x spring washer M8
- 8x washer M8
- 8x star knob screw

#### Notice

The mounting rails are 80 cm apart. Therefore, you have to make sure that the free surface of the beams must also be 80 cm apart. If this is not the case, we offer special adapter plates. Please contact us.


Lift the roof tent onto the roof rack.

Insert two screws into the aluminum profile on each side. Then lift the tent so that one screw is positioned to the right and one to the left of the roof rack.



Then attach the four brackets in the following order:

1. Mounting bracket
2. Spring washer
3. Washer
4. Star grip screw

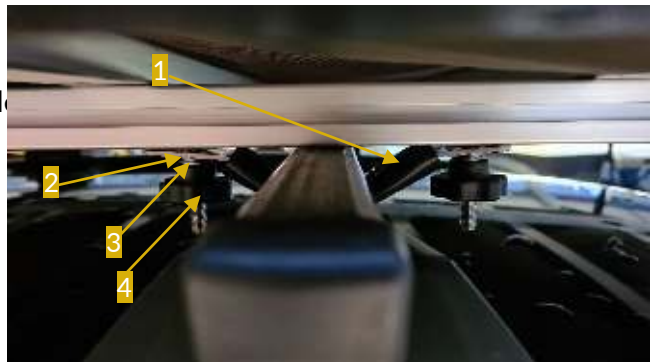

These are tightened by hand (without tools).

## Step 14

### The mattress

Open the tent and unfold the Outwell mattress\*. Place it in the tent and press the two ventilation valves inwards so that the mattress can inflate itself.

Tips from a professional: \*For the Outwell mattress is an instruction manual enclosed.



## Step 15

### The ladder


Loosen the Velcro and place the hooks in the ladder. Then hook the telescopic ladder\* between the tent and the frame and pull it down rung by rung.



## Step 16

### End caps


Clip the 4 cover caps to the 2 mounting rails

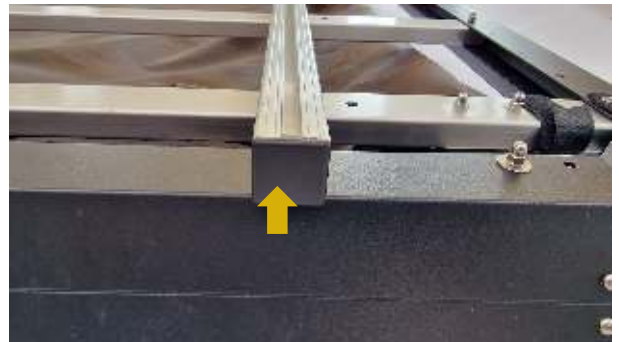

## Step 17

### The PVC-Cover

Pass the straps through the openings of the PVC cover and place it on the roof tent. Connect the clippers with the mounting rails and tighten it.

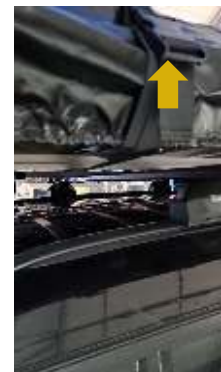

### Notice

Make sure to retighten the star grip screws every 200 kilometers

Tips from the professional:  
First to clip, then tighten.

